


Reversing the D1250 Door Hinge

1. Remove rubber hat from cylindrical housing.



2. Turn hinge upside down with back of hinge facing you. Rest base on protected surface. Using rubber tipped hammer forcefully strike side of hinge blade close to the base.

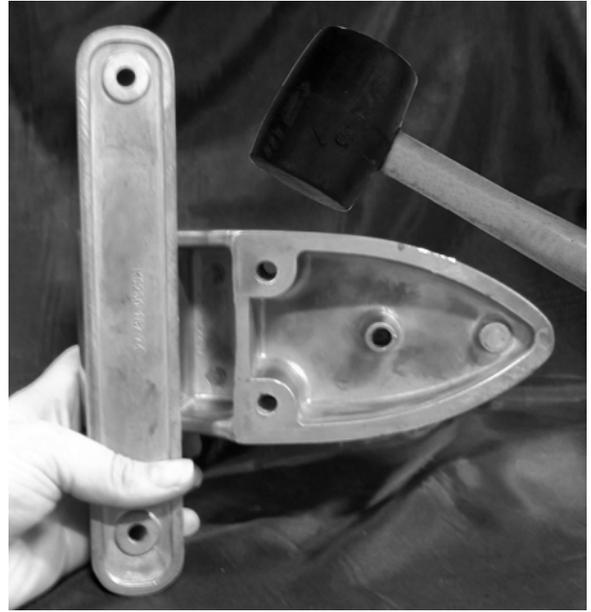

3. Repeat as necessary until hinge blade loosens and slides off.



4. Flip blade over to the other direction.



5. Match octagon of blade with octagon of nylon hinge.



6. Rest base on protected surface. Using rubber tipped hammer forcefully strike side of hinge blade close to the base. Repeat as necessary until hinge blade is resting fully on nylon hinge.



7. Spray adhesive into rubber hat. Bally Recommends 3M™ Super Trim Adhesive Spray. PN# 051135-08089

8. Attach rubber hat with adhesive on to cylindrical housing.



9. Your D1250 Hinge is now reversed.

